

# Directive Systems & Engineering

2702 Rodgers Terrace  
Haymarket, VA 20169-1628

[www.directivesystems.com](http://www.directivesystems.com)

703-754-3876

## 33cm Loop Yagi, Model DSE3333LYAK

### SPECIFICATIONS

Frequency range:	910-930 MHz	Gain:	18.5 dBi
Number of elements:	33	3 dB Beamwidth (E plane):	20°
Boom length:	144 inches	F/B ratio:	≥20 dB
Boom diameter:	1 inch	Maximum Power:	550 W average
Mast diameter:	2 inches max	Stacking distance:	30 inches' vertical 33 inches' horizontal
Weight: (assembled)	5 pounds		
Connector:	Type-N female		

### PARTS LIST


*Note: All hardware is Stainless Steel unless otherwise noted.*

Quantity	Description	Quantity	Description
2	.058"x1" Drilled boom sections	33	4-40 x 1 1/4" screw
2	Reflectors 1 & 2	33	4-40 lock nut
1	Driven element	4	8-32 x 1/2" screw
11	Directors 1-11	2	8-32 x 1 1/4" screw
7	Directors 12-18	2	8-32 x 2" screw
12	Directors 19-30	4	8-32 hex nut
		4	#8 Split Lock Washer
1	Anti-Seize Compound		
2	1" Black End Cap	1	Boom to Mast Bracket
1	2" U-bolt with nuts & lock washers	1	Boom to Mast Plate
1	Saddle	1	Cable assembly w/connector
		1	Assembly Manual

**Anti-Seize Compound** - Apply a small amount of the supplied Anti-Seize Compound to the aluminum joints and to the threads of the U-Bolts to prevent galling.

**BEFORE INSTALLING YOUR NEW ANTENNA, PLEASE BE SURE TO READ THE ENCLOSED WARNING PAMPHLET.**

**CAUTION:** *While we strive to remove all burrs from all machined parts, there is always the possibility of sharp edges. We strongly suggest checking the edges and use a fine file, or 400 grit sandpaper, to remove any burrs that may have been left.*

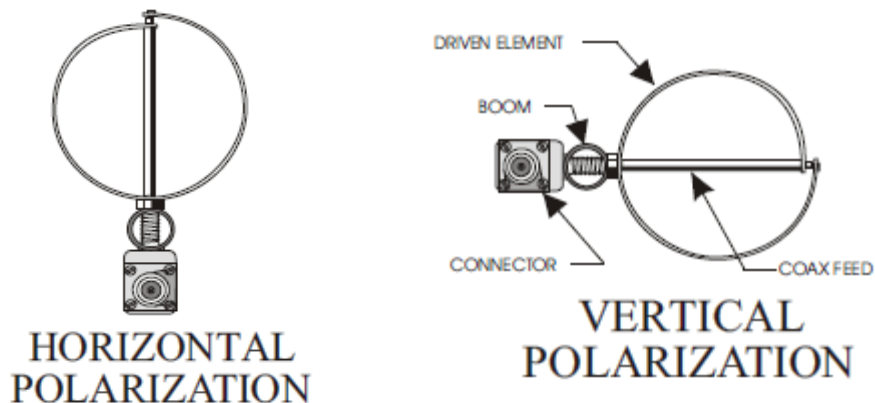

### ASSEMBLY INSTRUCTIONS

- 1) Attach loops to the boom with 4-40 screws, nuts and lock washers in proper sequence. Loops go on the side of the boom marked with an "X". The boom is spliced between D16 and D17 and is held together by the mounting screws for these elements. When tightening the nuts on the parasitic elements, be careful not to torque them too tightly. Snug down the nuts, align the elements and use a screwdriver for the final tightening. A 1/4-inch nut driver is almost mandatory for this job! Attach the driven element with the 5/16 nut provided. If only a single antenna is being built, it doesn't matter which way the loop is oriented. If antennas are to be stacked, see "Instructions for Stacking Loop Yagis".
- 2) Attach the boom to mast plate and bracket (square tubing). Use 8-32 x 2" hardware for BM bracket, and 8-32 x 1 1/4" hardware for attaching mounting plate to the square BM bracket. The mounting center is D15. Install U-bolt so that the mast comes up directly under the boom.
- 3) Install the cable assembly through the hole in the driven element mounting bolt. Make sure the connector bracket is correctly oriented, the bend should be forward for center mount antennas and rear facing for rear mount antennas. Solder the outer shield to the driven loop first making sure there is no shield sticking above the large hole in the driven loop. After the shield is soldered, pass the center conductor through the small hole in the driven loop and bend the center conductor over and solder (See Assembly Tips below).

*We have created a You Tube video, the link of which can be found on our website, documenting the following steps:*

<https://youtu.be/ojXbsDv5cvU>

At this point the connector assembly is facing down, connect a piece of coax and your SWR bridge or VNA. Pull down on the connector (which will flatten the loop) until you reach the lowest SWR. If it's less than 1.5:1 you can stop and make sure the loop doesn't try to pop back up, sometimes you have to squeeze the loop with your fingers to make sure it stays in the shape that gave the best SWR. If you want to further lower the SWR, from the rear of the antenna, place both your thumbs on the driven loop on either side and gently push it forward towards D1, you only need to tilt it maybe 3/16" to 1/4" and that should drop the SWR to 1.1:1 or less.

Now, GENTLY bend the UT-141 coax after it exits the boom towards the front or rear, depending on the mounting. You do not want to bend it so tightly that it crushes where it extends through the bolt. The connector bracket should line up with either D1 or D2 (or the hole with the circle around it on rear mount antennas), remove that nut and place the connector bracket on the screw and re-attach the nut. If the bracket doesn't line up, sometimes you have to flip the bracket. Loosen the  $\frac{3}{4}$ " nut by holding the connector body with a  $\frac{9}{16}$ " open end wrench. Remove the connector bracket and flip it.



Connector doesn't fit



Front Mount Connector




Rear Mount Connector

- 4) Attach the feedline and tape it to the mast. Seal all connections with silicone RTV or equivalent.
- 5) Attach the two black end caps, and this will complete the assembly of your DSE3333LYK.
- 6) The SWR should be 1.5:1 or better. Additional tweaking can be accomplished by adjusting the distance between the driven element and R1 or by adjusting the shape of the driven element.

**DO NOT, UNDER ANY CIRCUMSTANCES, APPLY ANY TYPE OF SEALANT OR COATING TO THE DRIVEN ELEMENT, T-ARMS OR CONNECTOR ASSEMBLY, OTHER THAN KRYLON® CLEAR COAT. ANY OTHER COATING WILL ADVERSELY AFFECT THE SWR AND VOID YOUR WARRANTY.**


### **ASSEMBLY TIPS:**

The boom diameter is 1 inch, and it is drilled for 4-40 hardware (no. 33 drill bit). The driven element hole is enlarged to  $\frac{5}{16}$  inch. All elements are 0.032-inch-thick and 0.375 inch wide. Note that the element spacing from D7 on is 5.115 inches. The feed coaxial cable (0.141-inch semi rigid) goes through the mounting bolt and is soldered to the open ends of the element. For best match, the driven element should be approximately 4 inches high; this makes it wider than it is tall. This shape can be adjusted for best match. This antenna is based on work done by G3JVL.

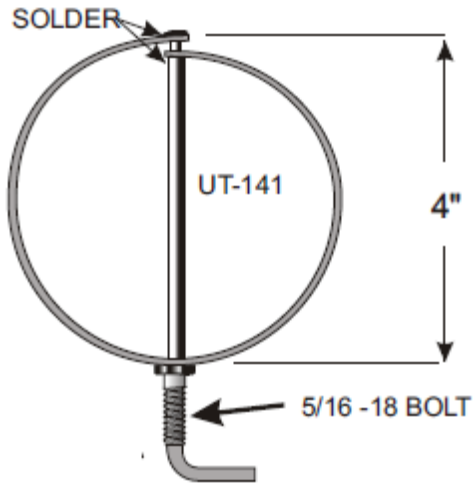

Soldered Driven Element

DIMENSIONS OF 910-930 MHz LOOP YAGI, MODEL 3333LYAK

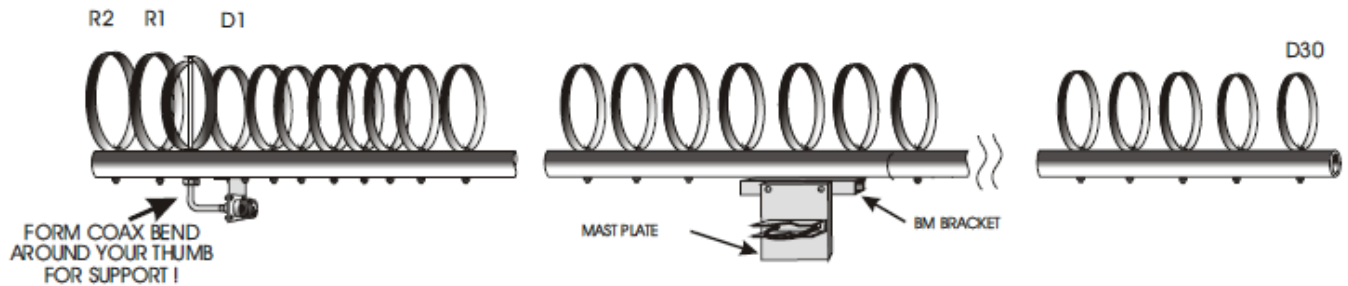

Element	Spacing from end of boom	Circumference	Element	Spacing from end of boom	Circumference	Element	Spacing from end of boom	Circumference
R2	0.500	13.722	D9	34.695	11.715	D20	90.960	10.927
R1	4.954	13.722	D10	39.810	11.715	D21	96.075	10.927
DE	6.319	13.280	D11	44.925	11.715	D22	101.190	10.927
D1	7.928	11.715	D12	50.040	11.353	D23	106.305	10.927
D2	9.121	11.715	D13	55.155	11.353	D24	111.420	10.927
D3	11.678	11.715	D14	60.270	11.353	D25	116.535	10.927
D4	14.236	11.715	D15	65.385	11.353	D26	121.650	10.927
D5	16.032	11.715	D16	70.500	11.353	D27	126.765	10.927
D6	19.351	11.715	D17	75.615	11.353	D28	131.880	10.927
D7	24.466	11.715	D18	80.730	11.353	D29	136.995	10.927
D8	29.580	11.715	D19	85.845	10.927	D30	142.110	10.927

Note: All dimensions are in inches.

## Directive Systems Warranty Policy

All Directive Systems antennas are built with the finest materials available. We take great pride in building a quality product that will give years of good service and performance. If there is a defect in materials or workmanship within 90 days of purchase, Directive Systems will repair or replace the defective part, free of charge, to the original purchaser. **DO NOT RETURN ANYTHING WITHOUT PRIOR AUTHORIZATION FROM DIRECTIVE SYSTEMS.** Please contact us either by phone or email describing the problem and we will work to resolve it.

If, after examining a new antenna you received, you are not satisfied, contact us immediately for return authorization and refund. **ANY ANTENNA THAT HAS BEEN MODIFIED WILL BE SUBJECT TO A RESTOCKING CHARGE. IF AN ANTENNA IS SO MODIFIED AS TO MAKE IT UNUSABLE, DIRECTIVE SYSTEMS RESERVES THE RIGHT TO REFUSE TO ACCEPT THE ANTENNA FOR RETURN.**