

# 24cm MHz Loop Yagi Kit, Model DSE2445LYK

### **SPECIFICATIONS**

Frequency range:	1.24 to 1.27 GHz	Gain:	≅20 dBi
Number of elements:	45	3 dB Beamwidth	
Boom length:	144 inches	(E plane):	≅16°
Boom diameter:	1 inch	F/B ratio:	<u>&gt;</u> 20 dB
Mast diameter:	2 inches max	Maximum Power:	550 W average
Weight: Assembled	4 pounds	Stacking distance:	24 inches' vertical
Shipping	7 pounds	-	26 inches' horizontal
Connector:	Type-N female		

#### PARTS LIST

Note: All hardware is Stainless Steel unless otherwise noted.


Quantity	Description	Quantity	Description
2	.058" x 1" drilled boom	45	4-40 x 1 1/4" screw
1	reflector 1 (1/4" wide)	45	4-40 lock nut
1	reflector 2 (3/8" wide)	2	8-32 x 1 1/4" screw
1	driven element	2	8-32 x 2" screw
4	directors 1-4 (1/4" wide)	4	8-32 hex nut
7	directors 5-11	4	#8 Split Lock Washer
6	directors 12-17	1	Boom to Mast Bracket
6	directors 18-23	1	Boom to Mast Plate
12	directors 24-35	1	2" U-bolt with nuts & lock washers
7	directors 36-42	1	Saddle
1	Anti-Seize Compound	1	Cable assembly w/connector
2	1" Black End Cap	1	Assembly Manual

**Anti-Seize Compound** - Apply a small amount of the supplied Anti-Seize Compound to the aluminum joints and to the threads of the U-Bolts to prevent galling.

#### BEFORE INSTALLING YOUR NEW ANTENNA, PLEASE BE SURE TO READ THE ENCLOSED WARNING PAMPHLET.

**CAUTION:** 

While we strive to remove all burrs from all machined parts, there is always the possibility of sharp edges. We strongly suggest checking the edges and use a fine file, or 400 grit sandpaper, to remove any burrs that may have been left.

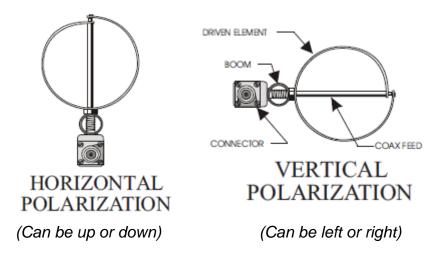

## ASSEMBLY INSTRUCTIONS

1) Attach loops to the boom with 4-40 screws, nuts and lock washers in proper sequence. Loops go on the side of the boom marked with an "X". Attach the contents of each bag of elements before opening the next bag. This will prevent any mix-up of elements on the boom. R2 (Reflector 2 -3/8" wide) is always the first element to be installed with R1 (Reflector 1 -1/4" wide) always next to the driven element. The boom is spliced between D22 and D23 and is held together by the mounting screws for these elements. When tightening the nuts on the parasitic elements, be careful not to torque them too tightly. Snug down the nuts, align the elements and use a screwdriver for the final tightening. A 1/4-inch nut driver is almost mandatory for this job! Attach the driven element with the 5/16 nut provided. If only a single antenna is being built, it doesn't matter which way the loop is oriented. If antennas are to be stacked, see "Instructions for Stacking Loop Yagis".

2) Attach the boom to mast plate and bracket (square tubing). Use 8-32 x 2" hardware for BM bracket, and 8-32 x 1 1/4" hardware for attaching mounting plate to the square BM bracket. The mounting center is D20. Install U-bolt so that the mast comes up directly under the boom.

3) Install the cable assembly through the hole in the driven element mounting bolt. Make sure the connector bracket is correctly oriented, the bend should be forward for center mount antennas and rear facing for rear mount antennas. Solder the outer shield to the driven loop first making sure there is no shield sticking above the large hole in the driven loop. After the shield is soldered, pass the center conductor through the small hole in the driven loop and bend the center conductor over and solder (See Assembly Tips below).

We have created a You Tube video, the link of which can be found on our website, documenting the following steps:

https://youtu.be/ojXbsDv5cvU

At this point the connector assembly is facing down, connect a piece of coax and your SWR bridge or VNA. Pull down on the connector (which will flatten the loop) until you reach the lowest SWR. If it's less than 1.5:1 you can stop and make sure the loop doesn't try to pop back up, sometimes you have to squeeze the loop with your fingers to make sure it stays in the shape that gave the best SWR. If you want to further lower the SWR, from the rear of the antenna, place both your thumbs on the driven loop on either side and gently push it forward towards D1, you only need to tilt it maybe 3/16" to 1/4" and that should drop the SWR to 1.1:1 or less.

Now, GENTLY bend the UT-141 coax after it exits the boom towards the front or rear, depending on the mounting. You do not want to bend it so tightly that it crushes where it extends through the bolt. The connector bracket should line up with either D1 or D2 (or the hole with the circle around it on rear mount antennas), remove that nut and place the connector bracket on the screw and re-attach the nut. If the bracket doesn't line up, sometimes you have to flip the bracket. Loosen the <sup>3</sup>/<sub>4</sub>" nut by holding the connector body with a 9/16" open end wrench. Remove the connector bracket and flip it.



Connector doesn't fit



Front Mount Connector



Rear Mount Connector

4) Attach the feedline and tape it to the mast. Seal all connections with silicone RTV or equivalent.


5) Attach the two black end caps, and this will complete the assembly of your DSE2445LYK.

6) The SWR should be 1.5:1 or better. Additional tweaking can be accomplished by adjusting the distance between the driven element and R1 or by adjusting the shape of the driven element.

DO NOT, UNDER ANY CIRCUMSTANCES, APPLY ANY TYPE OF SEALANT OR COATING TO THE DRIVEN ELEMENT, T-ARMS OR CONNECTOR ASSEMBLY, OTHER THAN KRYLON<sup>®</sup> CLEAR COAT. ANY OTHER COATING WILL ADVERSELY AFFECT THE SWR AND VOID YOUR WARRANTY.

#### **ASSEMBLY TIPS:**

The boom diameter is 1 inch, and it is drilled for 4-40 hardware (no. 33 drill bit). The driven element hole is 5/16-inch dia. All elements are 0.032-inch-thick and 0.375 inch wide except R1 & D1 thru 4 which are 0.250" wide. Note that the element spacing from D7 on is 3.560 inches. The driven element is installed in the 5/16" hole in the boom. The feed coaxial cable (0.141-inch semi rigid) goes through the mounting bolt and is formed in a 90-degree bend so that the connector bracket can be bolted to the boom at Director #1 using the D1 hardware. The connector end is soldered to the open ends of the brass element. Allow a 1/4" gap at the feed point. For best match, the driven element should be approximately 2 3/4 inches high; this makes it wider than it is tall. This shape can be adjusted for best match. This antenna is based on work done by G3JVL.

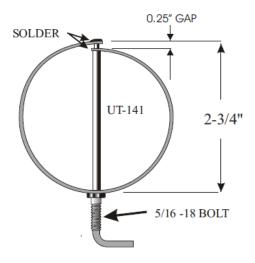



Soldered Driven Element

DIMENSIONS OF 1269 MHz LOOP YAGI, MODEL 2445LY(K)											
R2 (3/		<u>Í Í Í Í Í Í Í Í Í Í Í Í Í Í Í Í Í Í Í </u>	00	000			000				
AROUN FOR ATTA	COAX. BEND D YOUR THUMB SUPPORT ! CH TO DIR #1 NN BOOM.			MASTPLATE		> BM BRACKET					
Ele- ment	Spacing From end of boom	Circum- ference	Ele- ment	Spacing from end of boom	Circum- ference	Ele- ment	Spacing from end of boom	Circum- ference			
R2 R1 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12	0.000 3.100 4.050 5.170 6.000 7.780 9.560 10.810 13.120 16.680 20.240 23.800 27.360 30.920 34.480	10.000 9.586 8.584 8.584 8.584 8.584 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534 8.534	D13 D14 D15 D16 D17 D18 D19 D20 D21 D22 D23 D24 D25 D26 D27	38.040 41.600 45.160 48.720 52.280 55.840 59.400 62.960 66.520 70.080 73.640 77.200 80.760 84.320 87.880	8.274 8.274 8.274 8.274 8.274 8.008 8.008 8.008 8.008 8.008 8.008 8.008 7.905 7.905 7.905 7.905	D28 D29 D30 D31 D32 D33 D34 D35 D36 D37 D38 D39 D40 D41 D42	91.440 95.000 98.560 102.120 105.680 109.240 112.800 116.360 119.920 123.480 127.040 130.600 134.160 137.720 141.280	7.905 7.905 7.905 7.905 7.905 7.905 7.905 7.905 7.805 7.805 7.805 7.805 7.805 7.805 7.805 7.805 7.805			

Note: All dimensions are in inches

#### **Directive Systems Warranty Policy**

All Directive Systems antennas are built with the finest materials available. We take great pride in building a quality product that will give years of good service and performance. If there is a defect in materials or workmanship within 90 days of purchase, Directive Systems will repair or replace the defective part, free of charge, to the original purchaser. **DO NOT RETURN ANYTHING WITHOUT PRIOR AUTHORIZATION FROM DIRECTIVE SYSTEMS**. Please contact us either by phone or email describing the problem and we will work to resolve it.

If, after examining a new antenna you received, you are not satisfied, contact us immediately for return authorization and refund. ANY ANTENNA THAT HAS BEEN MODIFIED WILL BE SUBJECT TO A RESTOCKING CHARGE. IF AN ANTENNA IS SO MODIFIED AS TO MAKE IT UNUSABLE, DIRECTIVE SYSTEMS RESERVES THE RIGHT TO REFUSE TO ACCEPT THE ANTENNA FOR RETURN.