



Directive Systems & Engineering

2702 Rodgers Terrace
Haymarket, VA 20169-1628

www.directivesystems.com

703-754-3876

902 MHz Loop Yagi, Model DSE3333LYK

SPECIFICATIONS

| | | | |
|---------------------|----------------|--------------------|----------------------|
| Frequency range: | 890-910 MHz | Gain: | 18.5 dBi |
| Number of elements: | 33 | 3 dB Beamwidth | |
| Boom length: | 144 inches | (E plane): | 20° |
| Boom diameter: | 1 inch | F/B ratio: | ≥20 dB |
| Mast diameter: | 1.5 inches max | Maximum Power: | 550 W average |
| Weight: (assembled) | 5 pounds | Stacking distance: | 30 inches vertical |
| Connector: | Type-N female | | 33 inches horizontal |

PARTS LIST

| Quantity | Description | Quantity | Description |
|----------|-----------------|----------|--|
| 2 pcs | drilled boom | 1 pkg | 4-40 stainless steel screws, nuts, lock washers, 8-32 hardware |
| 2 | reflectors 1&2 | | |
| 1 | driven element | | |
| 11 | directors 1-11 | 1 | boom to mast bracket |
| 7 | directors 12-18 | 1 | boom to mast plate |
| 12 | directors 19-30 | 1 | U-bolt with nuts & saddle |
| | | 1 | Cable assembly with connector |

ASSEMBLY INSTRUCTIONS

1) Attach loops to the boom with 4-40 screws, nuts and lock washers in proper sequence. Loops go on the side of the boom marked with an "x" or "top". The boom is spliced between D16 and D17 and is held together with the mounting screws for these elements. When tightening the nuts on the parasitic elements, be careful not to torque them too tightly. Snug down the nuts, align the elements, and use a screwdriver for the final tightening. A 1/4" nut driver is almost mandatory for this job! Attach the driven element with the 5/16-18 nut provided. If only one antenna is being built, it doesn't matter which way the loop is oriented. If antennas are to be stacked, see "Instructions for Stacking Loop Yagis."

2) Attach the boom-to-mast plate and bracket (square tubing piece). The mounting center is D15. Install U-bolts so that the mast comes up directly under the boom.


3) Install the cable assembly through the hole in the driven element mounting bolt and solder the ends to the ends of the loop. Solder the inner conductor first. Bend the connector forward and secure it to the boom with the bracket provided. (The bracket is secured by the

nut for D1.) Attach the feedline and tape it to the bottom of the boom. Seal all connections with silicone RTV or equivalent.

4) The SWR should be 1.5:1 or better. Additional tweaking can be accomplished by adjusting the distance between the driven element and R1 or by adjusting the shape of the driven element.

ASSEMBLY TIPS:

The boom diameter is 1 inch, and it is drilled for 4-40 hardware (no. 33 drill bit). The driven element hole is enlarged to 5/16 inch. All elements are 0.032 inch thick and 0.375 inch wide. Note that the element spacing from D7 on is 5.115 inches. To bend elements, wrap the strip around a suitable form (such as a piece of pipe or tubing). The driven element is formed in the same way then soldered to the mounting bolt as shown. The feed coaxial cable (0.141 inch semi rigid) goes through the mounting bolt and is soldered to the open ends of the element. For best match, the driven element should be approximately 4 inches high; this makes it wider than it is tall. This shape can be adjusted for best match. This antenna is based on work done by G3JVL.

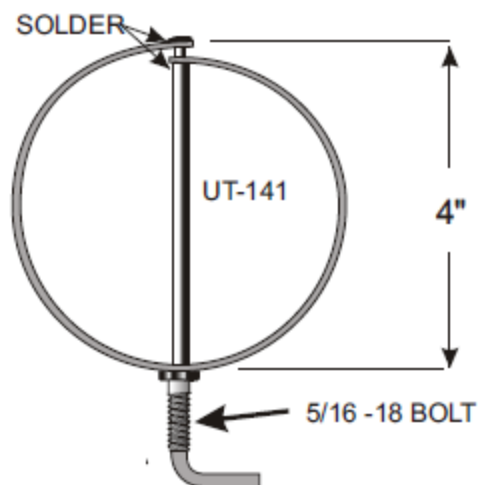

DIMENSIONS OF 902 MHz LOOP YAGI, MODEL 3333LY(K)

| Element | Spacing from end of boom | Circumference | Element | Spacing from end of boom | Circumference | Element | Spacing from end of boom | Circumference |
|---------|--------------------------|---------------|---------|--------------------------|---------------|---------|--------------------------|---------------|
| R2 | 0.500 | 13.931 | D9 | 34.695 | 11.893 | D20 | 90.960 | 11.093 |
| R1 | 4.954 | 13.931 | D10 | 39.810 | 11.893 | D21 | 96.075 | 11.093 |
| DE | 6.319 | 13.486 | D11 | 44.925 | 11.893 | D22 | 101.190 | 11.093 |
| D1 | 7.928 | 11.893 | D12 | 50.040 | 11.526 | D23 | 106.305 | 11.093 |
| D2 | 9.121 | 11.893 | D13 | 55.155 | 11.526 | D24 | 111.420 | 11.093 |
| D3 | 11.678 | 11.893 | D14 | 60.270 | 11.526 | D25 | 116.535 | 11.093 |
| D4 | 14.236 | 11.893 | D15 | 65.385 | 11.526 | D26 | 121.650 | 11.093 |
| D5 | 16.032 | 11.893 | D16 | 70.500 | 11.526 | D27 | 126.765 | 11.093 |
| D6 | 19.351 | 11.893 | D17 | 75.615 | 11.526 | D28 | 131.880 | 11.093 |
| D7 | 24.466 | 11.893 | D18 | 80.730 | 11.526 | D29 | 136.995 | 11.093 |
| D8 | 29.580 | 11.893 | D19 | 85.845 | 11.093 | D30 | 142.110 | 11.093 |

Note: All dimensions are in inches.

Directive Systems Warranty Policy

All Directive Systems antennas are built with the finest materials available. We take great pride in building a quality product that will give years of good service and performance. If there is a defect in materials or workmanship within 90 days of purchase, Directive Systems will repair or replace, free of charge, the defective part. **DO NOT RETURN ANYTHING WITHOUT PRIOR AUTHORIZATION FROM DIRECTIVE SYSTEMS.** Please contact us either by phone or email describing the problem and we will work to resolve it. If, after examining a new antenna you received, you are not satisfied, contact us immediately for return authorization and refund. **ANY ANTENNA THAT HAS BEEN MODIFIED WILL BE SUBJECT TO A RESTOCKING CHARGE. IF AN ANTENNA IS SO MODIFIED AS TO MAKE IT UNUSABLE, DIRECTIVE SYSTEMS RESERVES THE RIGHT TO REFUSE TO ACCEPT THE ANTENNA FOR RETURN.**