

Directive Systems & Engineering

2702 Rodgers Terrace
Haymarket, VA 20169-1628

www.directivesystems.com

703-754-3876

2000-2100 MHz Loop Yagi, Model DSE1445LYA

SPECIFICATIONS

Frequency Range:	2.000-2.100 GHz (any 25 MHz segment)
Number of elements:	45
Boom Length:	90 inches
Boom diameter:	0.625 inch
Mast diameter	1 1/2 inch
Weight (Shipping)	3 pounds
Connector:	Type N female
Gain:	$\cong 20.0$ dBi
3 dB Beamwidth (E Plane):	$\cong 16$ degrees
F/B Ratio:	≥ 20 dB
Maximum Power:	400 Watts average
Stacking distance:	15 inches Vertical (H) 17 inches Horizontal (E)

Note: All hardware is Stainless Steel unless otherwise noted.

Anti-Seize Compound - Apply a small amount of the supplied Anti-Seize Compound to the aluminum joints and to the threads of the U-Bolts to prevent galling.

BEFORE INSTALLING YOUR NEW ANTENNA, PLEASE BE SURE TO READ THE ENCLOSED WARNING PAMPHLET.


ASSEMBLY INSTRUCTIONS

- 1) Unpack antenna and locate the two preassembled antenna sections and the hardware package. The boom is broken between elements D22 and D23. Remove D22 from the boom piece and slide boom pieces together to alignment marks. Replace D22 and retighten. (D22 is the element approximately 0.5 inch from the end of the boom section; it will only fit together one way.) The booms are marked for your assembly.
- 2) Straighten any misaligned elements and tighten hardware if necessary. **But do not touch R1, DE or D1, as these are factory set.**
- 3) Attach the boom to mast plate to the boom with the hardware provided. Install the U-bolts so that the mast comes up directly under the boom.



HORIZONTAL POLARIZATION

(Can be up or down)

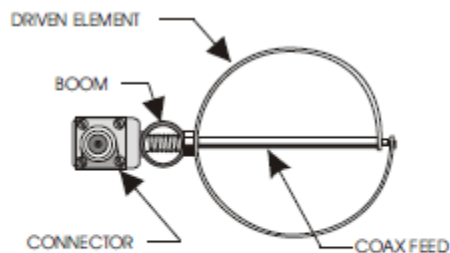

VERTICAL POLARIZATION

(Can be left or right)

- 4) Attach the feed line and tape it to the bottom of the boom. The connector should be sealed with electronic grade RTV or equivalent.
- 5) The antenna SWR has been adjusted at the factory for less than 1.5:1. Additional tweaking can be accomplished by adjusting the distance between the driven element and R1 and D1, or by adjusting the shape of the driven element. **NOTE: Do not attempt this adjustment unless the proper equipment and qualified personnel are available.**
- 6) If antennas are to be stacked, see "Instructions for Stacking Loop Yagis"

DO NOT, UNDER ANY CIRCUMSTANCES, APPLY ANY TYPE OF SEALANT OR COATING TO THE DRIVEN ELEMENT, T-ARMS OR CONNECTOR ASSEMBLY, OTHER THAN KRYLON® CLEAR COAT. ANY OTHER COATING WILL ADVERSELY AFFECT THE SWR AND VOID YOUR WARRANTY.

Directive Systems Warranty Policy

All Directive Systems antennas are built with the finest materials available. We take great pride in building a quality product that will give years of good service and performance. If there is a defect in materials or workmanship within 90 days of purchase, Directive Systems will repair or replace the defective part, free of charge, to the original purchaser. **DO NOT RETURN ANYTHING WITHOUT PRIOR AUTHORIZATION FROM DIRECTIVE SYSTEMS.** Please contact us either by phone or email describing the problem and we will work to resolve it.

If, after examining a new antenna you received, you are not satisfied, contact us immediately for return authorization and refund. **ANY ANTENNA THAT HAS BEEN MODIFIED WILL BE SUBJECT TO A RESTOCKING CHARGE. IF AN ANTENNA IS SO MODIFIED AS TO MAKE IT UNUSABLE, DIRECTIVE SYSTEMS RESERVES THE RIGHT TO REFUSE TO ACCEPT THE ANTENNA FOR RETURN.**